


# Assembly instruction

## Heavy-duty drawer slide 1105319

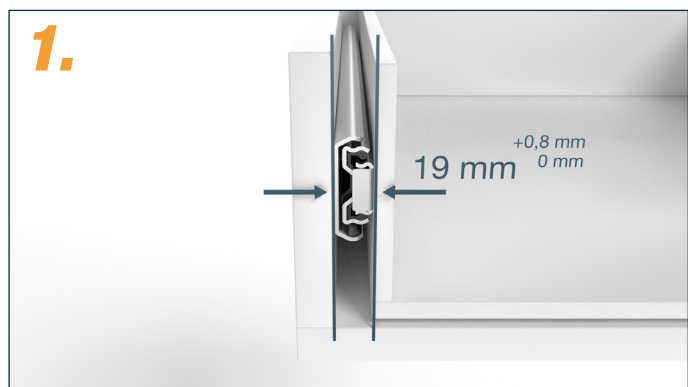


*Pay attention to minimum distance between body and drawer!*



*Installation length according to product description*




*Convenient installation due to separable inner rail.*

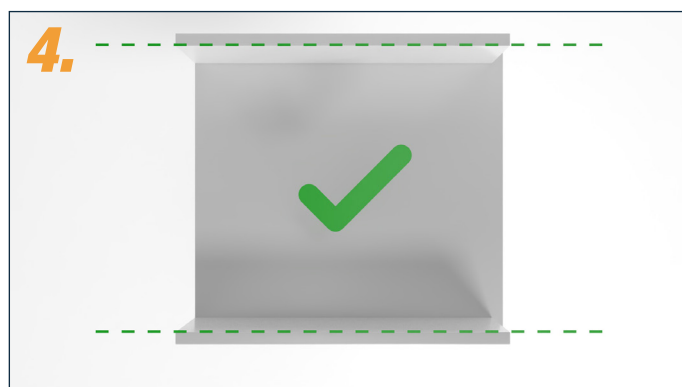

*Side walls of the cabinet body must be parallel.*



*Side walls of the cabinet body must be flush at the front.*

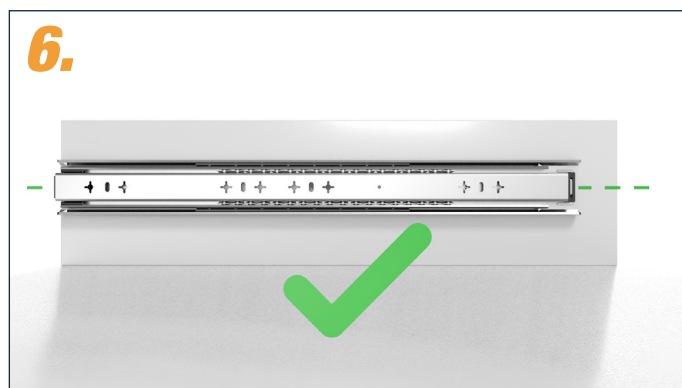

*Outer rail must run parallel to the floor.*

# Assembly instruction

## Heavy-duty drawer slide 1105319



Outer rails must be flush and parallel at the front.



The outer rail can be fixed in the slotted holes with screws and still be aligned. e.g. with 4 mm round-head screw (not supplied). Screws can optionally be removed after installation.




Fasten outer rail with countersunk screws.  
For metal body, e.g. with countersunk head screw M5x16, for wooden body e.g. countersunk screw 4.5x16 (available in our online shop).



The inner rail can be fixed with screws in the slotted holes e.g. with a 4 mm round-head screw (not supplied). Screws can be optionally removed again after installation.




Fasten the inner rail with countersunk screws.  
For metal body e.g. with countersunk head screw M5x16, for wooden body, e.g. with countersunk screw 4.5x16 (available in our online shop).

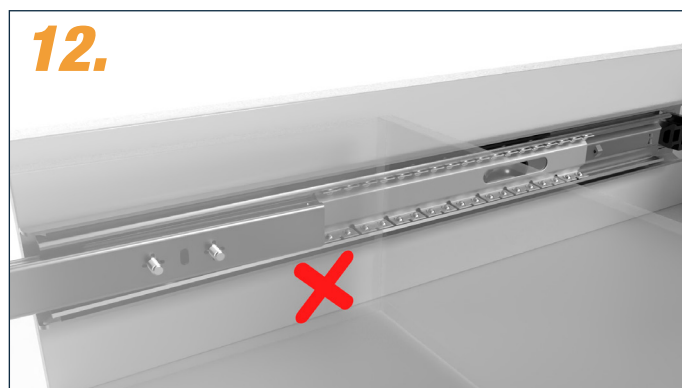

Incorrect handling can cause the rail to tilt.  
No liability is accepted for damage to the ball cage caused by incorrect reinsertion.

# Assembly instruction

## Heavy-duty drawer slide 1105319

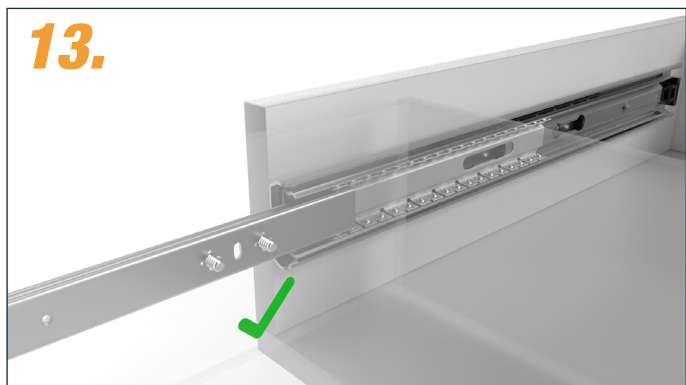

*Before installation, the ball cage must be pushed forward.*

**14.**



*Further information and a suitable installation video can be found on our website [www.multislides.eu](http://www.multislides.eu)*